

the Nutri Juicer®

BJE410



EN QUICK GUIDE

Sage®

2	Important Safeguards
5	Components
6	Assembly
8	Operation
9	Care & Cleaning
11	Troubleshooting
13	Guarantee

SAGE® RECOMMENDS SAFETY FIRST

At Sage® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- A downloadable version of this document is also available at sageappliances.com
- Before using for the first time ensure your electricity supply is the same as shown on the label on the underside of the appliance.

- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Fully unwind the power cord before operating.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Vibration during operation may cause the appliance to move.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.

WE RECOMMEND SAFETY FIRST

- Do not use the appliance if the power cord, plug, or appliance becomes damaged in any way. If damaged or maintenance other than cleaning is required, please contact Sage Customer Service or go to sageappliances.com
- Any maintenance other than cleaning should be performed by an authorised Sage® service centre.
- Children should not play with the appliance.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- The installation of a residual current safety switch is recommended to provide additional safety when using all electrical appliances. Safety switches with a rated operating current not more than 30mA are recommended. Consult an electrician for professional advice.
- Always ensure the appliance is properly assembled before use. The appliance will not operate unless properly assembled.
- Do not use the appliance on a sink drain board.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from moving or rotating parts during operation.
- Do not use the appliance for anything other than food and/or beverage preparation.
- In order to avoid the possible hazard of the appliance starting by itself due to inadvertent resetting of the overload protection, do not attach an external switching device (such as a timer) or connect the appliance to a circuit that can regularly switch the appliance on and off.
- Carefully read all instructions before operation and save for future reference.
- The appliance can be used by persons with reduced physical or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Do not leave the appliance unattended when in use.
- Do not push food into the feed chute with your fingers or other utensils. Always use the food pusher provided. Do not place hand or fingers into the food chute when it is attached to the appliance.

WE RECOMMEND SAFETY FIRST

- Do not juice stone fruit unless seeds and/or stones have been removed.
- Do not operate the juice extractor without the pulp and juice container in place.
- Make sure the stainless steel filter basket has stopped rotating and the motor has completely stopped before releasing the safety locking arm and/or attempting to move the appliance, when the juicer is not in use, and before disassembling, cleaning and storing.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.
- Be careful when handling the stainless steel filter basket as the small cutting blades at the base of the filter basket are very sharp. Mishandling may cause injury.

- Remove rind from all citrus fruit before juicing.
- Do not use the appliance if the rotating sieve (filter basket) or lid is damaged.
- Always make sure juicer cover is clamped securely in place before motor is turned on. Do not unfasten interlock arm while juicer is in operation.



The symbol shown indicates that this appliance should not be disposed of in normal household waste.

It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the power plug, cord or appliance in water or any liquid.

SAVE THESE INSTRUCTIONS

COMPONENTS



- | | |
|--|---|
| A. Food pusher | H. Interlocking safety arm |
| B. Unique Direct Central Feed System | I. Juicer cover
(not dishwasher safe). |
| C. Extra wide 84mm feed chute | J. Filter bowl surround
(dishwasher safe). |
| D. Stainless steel titanium reinforced
micro mesh filter basket | K. 1 litre juice jug and lid
(dishwasher safe). |
| E. Large capacity pulp container
(dishwasher safe). | L. 2 speed electronic control
ON / OFF switch |
| F. Heavy duty 1200 watt motor | |
| G. Cord storage | |



Rating Information

220-240V~ 50/60Hz 1050-1250W

ASSEMBLY

BEFORE FIRST USE

Before using your juicer for the first time, remove and safely discard any packaging materials and promotional stickers and labels.

Ensure the appliance is switched off at the power outlet and the power cord is unplugged.

Wash the filter bowl surround, filter basket, juicer cover, food pusher, pulp container and juice jug and lid in warm, soapy water with a soft cloth. Rinse and dry thoroughly. The motor base can be wiped with a damp cloth. Dry thoroughly.

 
1. Place motor base on a flat, dry surface such as a bench top. Ensure that the motor base is switched OFF at the control panel, then switch the appliance off at the power outlet and unplug the power cord.



2. Place filter bowl surround on top of the motor base.




3. Align the arrows at the base of the stainless steel filter basket with the arrows on the motor drive coupling and push down until it clicks into place. Ensure the stainless steel filter basket is fitted securely inside the filter bowl surround and onto the motor base.

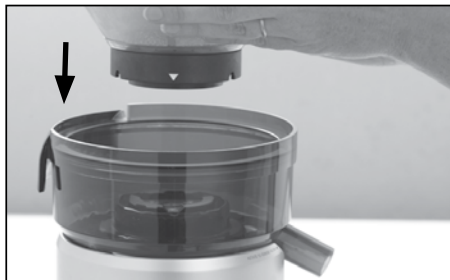

4. Place the juicer cover over the filter bowl surround, positioning the feed chute over the stainless steel filter basket and lower into position.




 5. Raise the safety locking arm up and locate into the two grooves on either side of the juice cover.

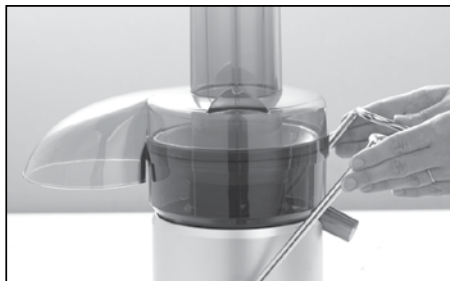


ASSEMBLY

 
The safety locking arm should now be in a vertical position and locked into place on top of the juice cover.

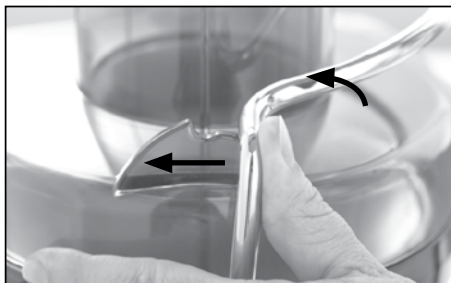

 6. Slide the food pusher down the food chute by aligning the groove in the food pusher, with the small protrusion on the inside of the top of the feed tube.

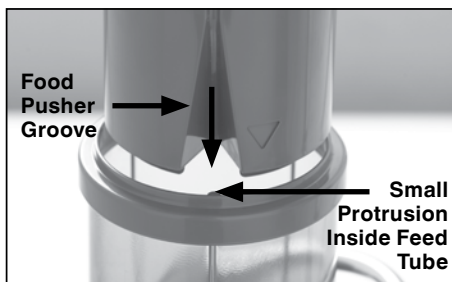

 Continue to slide the food pusher down on the feed chute.

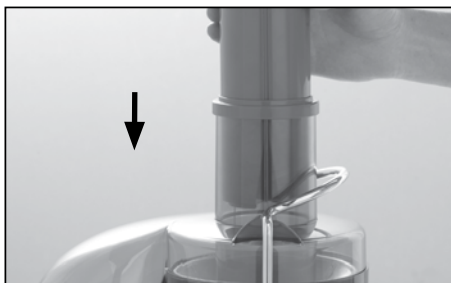

7. Place the pulp container into position by tilting the motor base slightly to the right. Insert the pulp container under the juicer cover on the left hand side ensuring it is supported by the juicer cover and motor base.



NOTE

To minimise cleaning, line the pulp container with a plastic freezer bag to collect the pulp. Pulp can be used in other dishes, or as a compost for the garden or discarded.

8. Place the juicer jug under the juice spout on the right hand side of the juicer. The juicer jug lid can be used to avoid any splatter.

OPERATION

1. Wash your selection of fruit and vegetables to be juiced.
2. Ensure the juicer is correctly assembled. Refer to Assembling your Sage® juicer. Ensure the juicer jug is placed under the juice spout and pulp container is in position before commencing juicing.
3. Plug the power cord into a 220–240V power outlet. Turn the power ON at the power outlet. Adjust the speed to the desired setting. Push the two speed switch either up for low speed or down for high speed depending on the type of fruit or vegetable being juiced. Use the speed selector as a guide for juicing different fruits and vegetables.

SPEED SELECTOR TABLE

Apples	High
Apricots (stone removed)	Low
Beetroot (trimmed)	High
Blueberries	Low
Broccoli	Low
Brussels sprouts (trimmed)	High
Cabbage	Low
Carrots	High
Cauliflower	Low
Celery	High
Cucumber (peeled)	Low
Cucumber, soft skinned	High
Fennel	High
Grapes (seedless)	Low
Kiwi Fruit (peeled)	Low
Mangoes (peeled, stone removed)	Low
Melons (peeled)	Low
Nectarines (stone removed)	Low
Oranges (peeled)	High or Low

SPEED SELECTOR TABLE

Peaches (stone removed)	Low
Pears (stalks removed)	High for hard or Low for soft
Pineapple (peeled)	High
Plums (stone removed)	Low
Raspberries	Low
Tomatoes	Low
Watermelon (peeled)	Low

4. With the motor running, place food into the feed chute and use the food pusher to gently guide food down. To extract the maximum amount of juice, always push the food pusher down slowly.

 
NOTE

The motor must be running prior to loading the feed chute.



WARNING

Never use fingers to push food down the feed chute or to clear the feed chute. Always use the food pusher provided.

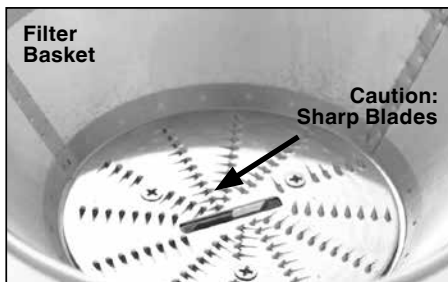

WARNING

The stainless steel filter basket contains small sharp blades to cut and process fruit and vegetables. Avoid touching the blades when handling the filter basket.

CARE & CLEANING

Ensure the juicer is turned off by switching the ON / OFF button on the control panel to OFF. Then switch the appliance off at the power outlet and unplug the power cord.

Ensure the juicer is correctly disassembled. Refer to Disassembling your new appliance.

FOR EASIER CLEANING:

- Clean as you go and avoid dried on juice or pulp residue.
- Immediately after each use, rinse removable parts in hot water to remove wet pulp. Allow parts to air dry.

NOTE

To minimise cleaning, line the pulp container with a plastic freezer bag to collect the pulp. Pulp can then be used for other dishes, or as compost for the garden or discarded.



CLEANING THE MOTOR BASE

- Wipe the motor base with a soft, damp cloth then dry thoroughly.
- Wipe any excess food particles from the power cord.

NOTE

Do not use abrasive scouring pads or cleaners when cleaning the parts or motor base as they may scratch the surface.

CLEANING THE FILTER BOWL SURROUND, JUICER COVER, FOOD PUSHER, PULP CONTAINER

Wash all parts in warm soapy water with a soft cloth. Rinse and dry thoroughly.

NOTE

The filter bowl surround, juicing jug and lid, food pusher and pulp container, are dishwasher safe (top shelf only). The juice cover is not dishwasher safe.

CLEANING THE FILTER BASKET

- For consistent juicing results always ensure that the stainless steel filter basket is thoroughly cleaned using the supplied cleaning brush. It is important to do this immediately after use.
- Soak the stainless steel filter basket in hot soapy water for approximately 10 minutes immediately after juicing is completed. If pulp is left to dry on the filter it may clog the fine pores of the filter mesh thereby lessening the effectiveness of the juicer.
- Using the cleaning brush, hold the filter basket under running water and brush from the inside of the basket to the outer rim. Avoid touching the small sharp blades in the centre of the filter basket. Repeat this process on the outside of the basket. After cleaning the filter basket, hold it up towards a light to ensure the fine mesh holes are not blocked. If the holes are blocked, soak the filter basket in hot water with 10% lemon juice to loosen the blocked holes. Repeat the cleaning process using the cleaning brush. Alternatively, wash the filter basket in the dishwasher.

CARE & CLEANING



Do not soak the stainless steel filter basket in bleach or other abrasive cleansers.

Always treat the filter basket with care as it can be easily damaged.

NOTE

The stainless steel filter basket is dishwasher safe (top shelf only).

CLEANING THE JUICE JUG

- Rinse the juice jug and lid with froth attachment under running water.
- Wash both parts in warm soapy water with a soft cloth. Rinse and dry thoroughly.

NOTE

The juice jug and lid are dishwasher safe (top shelf only).

REMOVING STUBBORN OR STRONG FOOD STAINS AND ODOURS

Discolouration of the plastic may occur with strongly coloured fruit and vegetables. To help prevent this, wash parts immediately after use. If discolouration does occur, the plastic parts can be soaked in water with 10% lemon juice or they can be cleaned with a non abrasive cleaner.

The juicer is constructed with a heavy duty 1200 watt motor. So heavy duty, we have given the motor a 5-year guarantee against faulty materials or manufacture. This warranty is an extension of the 12-month replacement guarantee and covers the motor only. The warranty does not cover damage caused by accident, misuse, or being used in a manner not stated in the instruction book.



WARNING

Do not immerse the motor base in water or any other liquid. The centre of the filter basket and feed chute contains small sharp blades to process fruit and vegetables during the juicing function. Do not touch blades when handling the filter basket or feed chute.

TROUBLESHOOTING

POSSIBLE PROBLEM	EASY SOLUTION
Machine will not work when switched ON	<ul style="list-style-type: none"> The safety locking arm may not be correctly engaged in the vertical operating position with the locking arm located into the two grooves on either side of the juicer cover.
Motor appears to stall when juicing	<ul style="list-style-type: none"> Wet pulp can build up under the juicer cover if the juicing action is too vigorous. Try slower juicing action by pushing the food pusher down more slowly. Follow Disassembling and Cleaning instructions and clean the filter bowl surround, the stainless steel filter basket and the juicer cover. The juicer will automatically stop operating if the motor is stalled for more than 10 seconds. Either too much food is being processed at one time or the pieces are not small enough. Try trimming the food or cutting into smaller pieces of even size and processing a smaller amount per batch. To continue juicing, reset the juicer by pressing the ON / OFF switch on the control panel back to OFF then turn the appliance back on by pressing ON / OFF switch to ON. Hard fruit and vegetables will put excess strain onto the motor if a low speed is selected. Please refer to the juicing guide to determine the correct speed for the fruit and vegetables selected for juicing. Please ensure the motor is running prior to loading the chute.
Excess pulp building up in the stainless steel filter basket	<ul style="list-style-type: none"> Stop the juicing process and follow Disassembling instructions. Remove the juicer cover, scrape off pulp, reassemble and begin juicing again. Try alternating (soft and hard) vegetables and fruit varieties.

TROUBLESHOOTING

POSSIBLE PROBLEM	EASY SOLUTION
Pulp too wet and reduced extracted juice	<ul style="list-style-type: none"> Try a slower juicing action. Remove the stainless steel filter basket and thoroughly clean mesh walls with a cleaning brush. Rinse the filter basket under hot water. If the fine mesh holes are blocked, soak the basket in a solution of hot water with 10% lemon juice to unlock the holes or wash in the dishwasher. This will remove excess fibre build up (from fruit and vegetables) which could be inhibiting the flow.
Juice leaks between the rim of the Juicer and the juicer cover	<ul style="list-style-type: none"> Try a slower juicing speed and push the food pusher down the feed chute more slowly. Ensure all parts are securely pieced together, with the interlocking arm in place.
Juice sprays out from spout	<ul style="list-style-type: none"> The juice is being extracted too fast: try a slower juicing speed and push the food pusher down the feed chute more slowly.
Overheating with excessive loads.	<ul style="list-style-type: none"> The juicer is fitted with a safety device which safeguards against overheating with excessive loads. If overheating occurs, the juicer will automatically activate the overload protection device and the unit will switch itself off. When the overload protection is activated, unplug the Juicer from the power outlet for at least 15 minutes to allow the unit to cool. Then plug the juicer into the power outlet and use as normal. It is important to ensure the juicer is turned on and the motor is running prior to loading the chute. Do not put excessive loads in the feed chute and ensure the filter basket is totally clear of any food build up, on the blades and mesh, as this can result in unnecessary resistance against the motor resulting in overheating.

GUARANTEE

2 YEAR LIMITED GUARANTEE AND 5 YEAR LIMITED MOTOR GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years for all parts of the product and 5 years for the product's motor from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.

NOTES

GBR

IRE

BRG Appliances Limited
Unit 3.2, Power Road Studios, 114 Power Road, London, W4 5PY
Freephone (UK Landline): +44 (0)808 178 1650
Mobile Calls (National Rate): 0333 0142 970



www.sageappliances.com

Registered in England & Wales No. 8223512.

• Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.
Copyright BRG Appliances 2019.

SJE410 UG1 C19